RADON TEST KIT

AXIUM
RADON MITIGATIONS

THE QUICKEST, EASIEST RADON TEST KIT ON THE MARKET!

SAFE AND EASY TO USE
DETECTS TOXIC RADON GAS

Analysis provided by PRIORITYLAB

(303) 276.6043 | admin@axiuminspections.com

Manufactured by BREEZE

RADON GAS TEST KIT

CDC/EPA HEALTH ADVISORY ON RADON

Radon is a silent killer and is the #1 cause of lung cancer in non-smokers. The EPA and US Surgeon General have stated that, "radon gas is responsible for 21,000 lung cancer deaths every year". Lung cancer now surpasses breast cancer as the number one cause of death among women. The EPA advises home owners to use a short-term radon test kit as the quickest way to test for radon gas in homes.

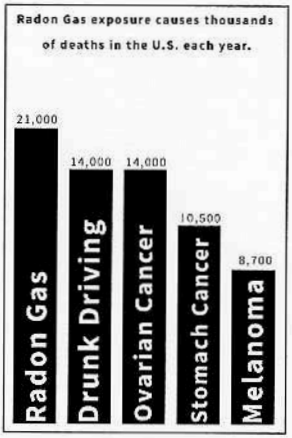

WHAT YOU SHOULD KNOW ABOUT RADON GAS

Radon is a colorless, tasteless, invisible, and radioactive gas that forms naturally in soil from the decay of uranium. This decay produces the radon gas that can seep into homes, day care centers, schools, and offices. When these radioactive particles are breathed into your lungs, they can cause damage to lung tissue and cause cancer.

HOW CAN RADON GAS GET INTO MY HOME?

Radon gas can enter your home through cracks in cement, sump pumps, loose-fitting fixtures, drains, even from your water supply.

FIND OUT IF YOU HAVE A RADON GAS PROBLEM IN YOUR HOME

Millions of homes in America are contaminated with radon gas. **YOU MUST TEST TO FIND OUT IF YOU HAVE A RADON GAS CONTAMINATION PROBLEM IN YOUR HOME.** The Axium Radon Mitigation Short-Term Radon Gas Test Kit is a quick and accurate way to determine your radon gas levels. Simply place the vial in the desired area for 2-4 days for accurate results. Easy to follow instructions are included inside.

CERTIFICATIONS: ■ **FL-DOH:** RB-2721 (Laboratory)**NNRP:** 111497-AL (Device)**NNRP:** L5-8316

CONTENTS: ■ One(1) short-term radon detector ■ pre-paid postage envelope ■ Radon Information Form

For questions or more information call PriorityLab at 888-854-0477

INSTRUCTIONS

IMPORTANT INSTRUCTIONS PRIOR TO TESTING:

- **Maintain "Closed Home" Conditions:** Close all windows and doors for at least 12 hours prior to starting the test and for the entirety of the test. Doors may be used for normal entry and exit.
- **Radon Mitigation Systems:** Permanently installed mitigation systems may be operated as normal during the testing period.
- **Furnace/Central Heating/Air Conditioning:** These may be operated as normal during the testing period.
- **Window Air Conditioners:** May ONLY be operated in "recycle" mode with the vent closed during the testing period.
- **Do Not Operate:** Fans, whole house fans, or fireplaces **at any time** during the test.
- **Do not conduct test during severe weather.**

THINGS NOT TO DO DURING TESTING:

Do not place the test kit 1) near any heat source or in direct sunlight, 2) do not place in a kitchen, closet, laundry room, 3) do not test during extreme weather. Close all windows and doors for at least 12 hours. Doors may be used for normal entry and exit. Do not leave doors open. Keep windows and door closed during testing. Do not place vials near drafts, vents, windows or doors. Do not operate fireplaces or whole house fans during testing. Window air conditioners may ONLY be operated in "recycle" mode with the vent closed.

RECORD AND SAVE THE DETECTOR SERIAL NUMBER:

Radon Detector Serial Number: # ☐☐☐☐☐☐☐☐

BEGINNING THE TEST:

DO NOT place the test kit: 1) near any heat source or in direct sunlight, 2) in a kitchen, closet or laundry room, or 3) near drafts, vents, windows, or doors.

Test Kit Placement and Instructions:

1. Remove and save the cap from the vial in the test kit.
2. Place the test kit vial in the lowest living area of your home.
3. Place the test kit vial at least two (2) feet above the ground and three (3) feet from the wall.
4. Record the exact hour and minute (AM/PM) and date of the start of the testing period.
5. Allow the test to run for 48-96 hours, but no longer than that.

ENDING THE TEST:

1. Securely replace the cap on the vial in the test kit.
2. Record the exact hour and minute (AM/PM) and date of the end of the testing period.
3. Complete the information on the included Test Location Form. Make sure to tear off Test Location Form and keep the instructions to keep track of your test kit's serial number.
4. **Mail the vial and Test Location Form using the included mailer within 24 hours. We must receive your test kit and completed form within eight (8) days of the test end date.**

LAB RESULTS:

You will receive an email with your radon test results within seven (7) business days after PriorityLab has received the vials.

TEST LOCATION FORM

COMPLETED FORM MUST BE MAILED WITH VIAL

Name: _____ Phone: _____

Test Address: _____

City: _____ State: _____

County: _____ Zip: _____

Email: _____

Radon Detector Serial Number: # ☐☐☐☐☐☐☐

REQUIRED (Start) Cap Removed: Date ____ / ____ Exact Start Time: ____ : ____ AM/PM

REQUIRED (End) Cap Replaced: Date ____ / ____ Exact End Time: ____ : ____ AM/PM

Test Purpose: Initial Screening ☐ Follow-up Test ☐ Post Mitigation ☐

Building Type: Residential ☐ Non Residential ☐ Day Care ☐ Day Care in Public Schools ☐

Structure Type: Basement ☐ Slab on Grade ☐ Crawl Space ☐ Other: _____

Floor Tested: Basement ☐ 1st Floor ☐ 2nd Floor ☐ Name of room tested: _____

Closed building conditions were maintained during the test ☐ Yes ☐ No

PLEASE COMPLETE ENTIRE FORM AND MAIL WITH VIAL

Fold along dotted line

PAYMENT FORM

PAID BY
AXIUM RADON MITIGATION

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATE

BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO. 14 FT LAUDERDALE, FL

POSTAGE WILL BE PAID BY ADDRESSEE

PRIORITY LAB
3301 NW 55TH ST
FORT LAUDERDALE FL 33309-9957